

Moody Radio Network Relay Assignments

Effective 9-08-2025

XDS-PRO Relays	Relay Function	Time	XDS-PRO Pinouts
Relay 1	Program Start – Precedes all program starts	Various	1 & 20
Relay 2	Break Start – Precedes all program breaks	Various	2 & 21
Relay 3	Newscast Start – Precedes all hourly newscasts (carry-over from SRN News days)	Selected hours at :55:00	3 & 22
Relay 4	Network ID — Precedes hourly :60 Network ID	Every hour at :59:00	4 & 23
Ground	N/A	N/A	5 & 24
Relay 5	Satellator ID Start – Precedes hourly :30 Sponsorship/ID announcement (intended for use on MB2 only)	Every hour at :59:30	6 & 25
Relay 6	Moody-3 Specific Break Start - Precedes all Moody-3 program breaks (i.e., Moody-3 recorded Karl & Crew non-share content for Affiliate use weekdays, 5-9am CT during special events such as Spring & Fall Share for Moody O&Os)	Every hour at :59:00	7 & 26
Relay 7	Hourly Time Synchronization Relay for automation systems	Every hour at :54:30	8 & 27
Relay 8	Moody-2 Specific Break Start - Precedes all Moody-2 program breaks (including during Karl & Crew weekdays, 5-9am CT)	Various	9 & 28

Updated: 09-08-2025_DW